

HG.::

,215 ,291 ,220 ,292 ~293 -295 ~ 296 ~297 298 294 ALTERNATIVE PLAYBACK NUMBER 210 214 PLAYBACK PATH INFORMATION TABLE NEXT PLAYBACK NUMBER PLAYBACK CONTROL INFORMATION CONTENT NAME `Opening.mpg Interview.mpg · Trailer.mpg Purchase.mpg Movie.mpg 221 Warning.mpg Menu.mpg Trailer.mpg 213 218 PLAYBACK NUMBER

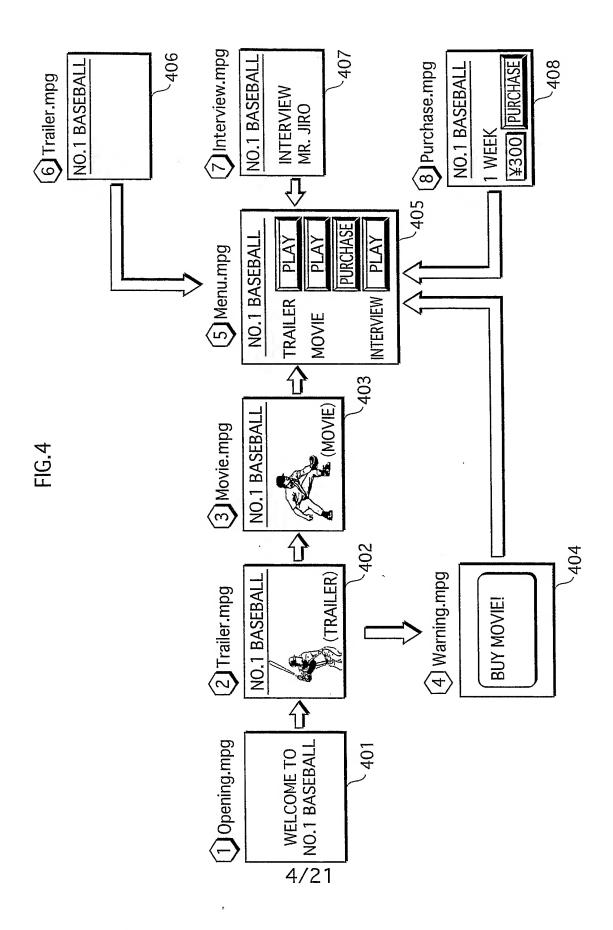


FIG. 5

BUTTON DATA TABLE

249 SELECTED | GRAYED-OUT DATA PLAY PLAY 248 DATA PLAY PLAY PLAY 247 SELECTED DATA PURCHASE PLAY PLAY PLAY RIGHT BUTTON NUMBER ന 4 **BUTTON DATA** LEFT BUTTON NUMBER 2 က LOWER BUTTON NUMBER -245 2 ന 4 UPPER BUTTON NUMBER 4 2 3 **PLAYBACK** NUMBER 242/2 ന ∞ / BUTTON NUMBER 2 $^{\circ}$ 4 5/21

FIG.6

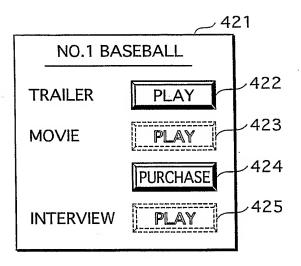


FIG.7

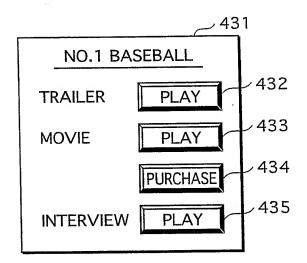


FIG. 8

			7266		_272		.273)	_274	
	270	RIGHTS MODE INFORMATION	(-) 00	(—) 00	O1 (MODE A)	(-) 00	(-) 00	01,10 (MODES A AND B)	10 (MODE B)	
-E	265	COPYABILITY INFORMATION	01 (Once)	10 (Free)	00 (Never)	00 (Never)	00 (Never)	00 (Never)	00 (Never)	
KEY CONTROL INFORMATION TABLE	KEY CONTROL INFORMATION 264	PLAYABILITY INFORMATION	(PLAYABLE)	1 (PLAYABLE)	0 (UNPLAYABLE)	(PLAYABLE)	1 (PLAYABLE)	0 (UNPLAYABLE)	$\begin{pmatrix} 0 \\ \text{UNPLAYABLE} \end{pmatrix}$	1/2
KEY CONTROL IN		KEY GENERATION INFORMATION	(MEDIA KEY)	00 (MEDIA KEY)	O1 (COMPOSITE KEY)	00 (MEDIA KEY)	00 (MEDIA KEY)	10 , (RIGHTS KEY)	10 (RIGHTS KEY)	, 268 269
	2 263	CONTENT	1111	2222	3333	4444	5555	9999	7227	267 2
	292	CONTENT	Opening.mpg	Trailer.mpg	Movie.mpg	Warning.mpg	Menu.mpg	Making.mpg	Interview.mpg	
8/21										


FIG. 9


MEDIA INFORMATION TABLE

_₹ 280


	MEDIA INFORMATION					
	DEVICE INFORMATION	ENCRYPTED MEDIA KEY				
281~	0001	qwerty	-282			
	0002	asdfgh				
	0004	zxcvbn	·			
	0005	uiop@[
	0006	jkl;:]				
	0007	m,./¥¥				
	:	:				


FIG.10

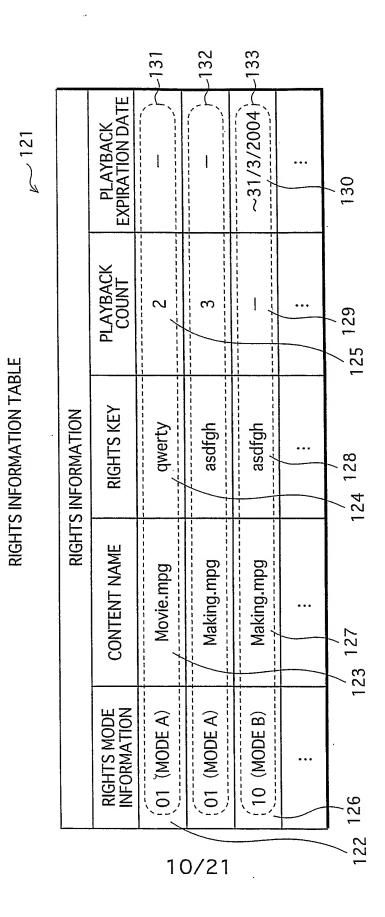


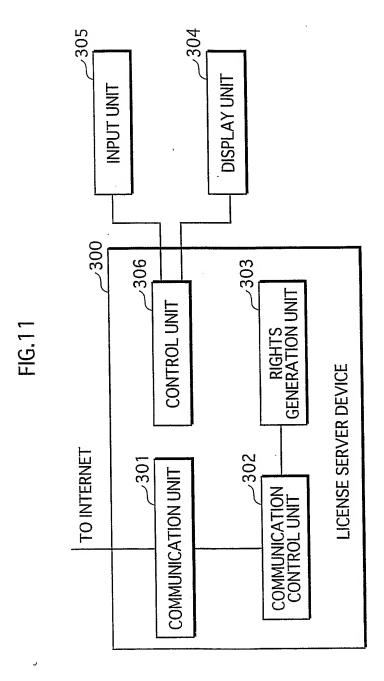



11/21

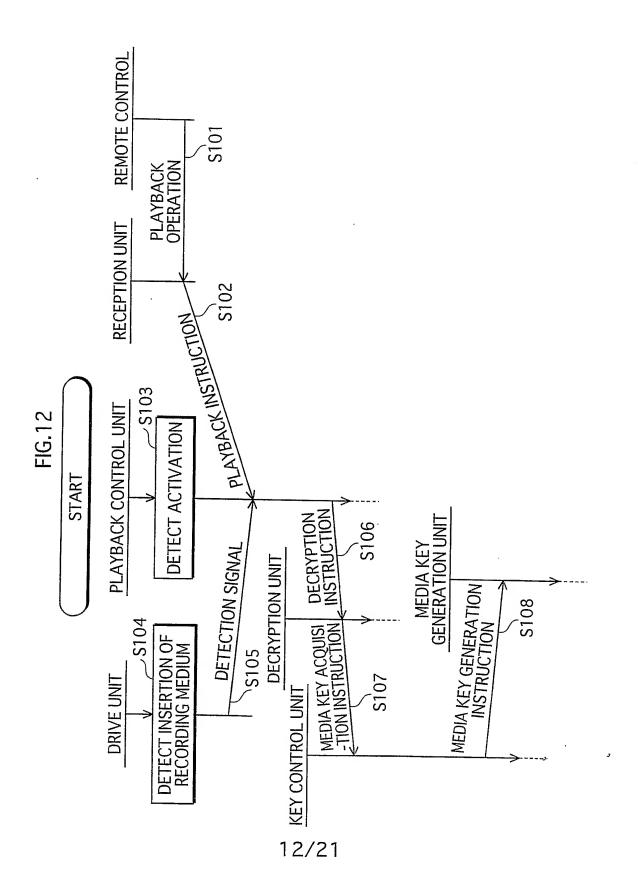


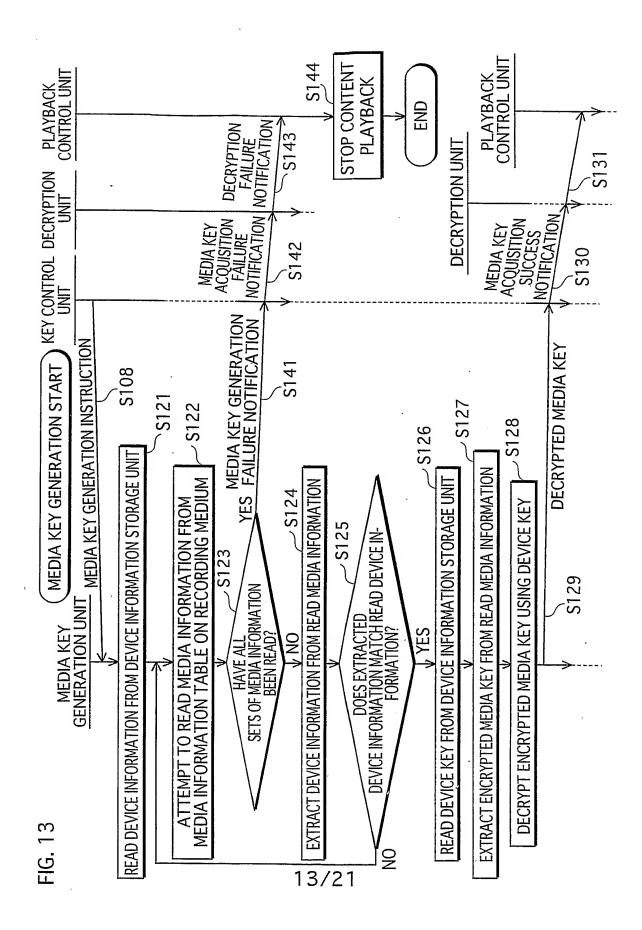


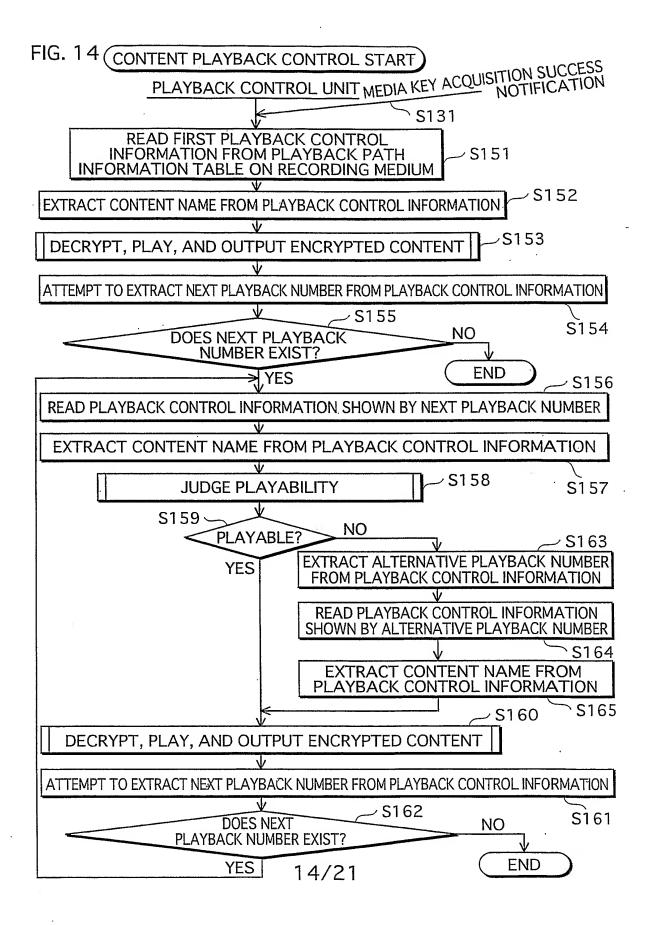

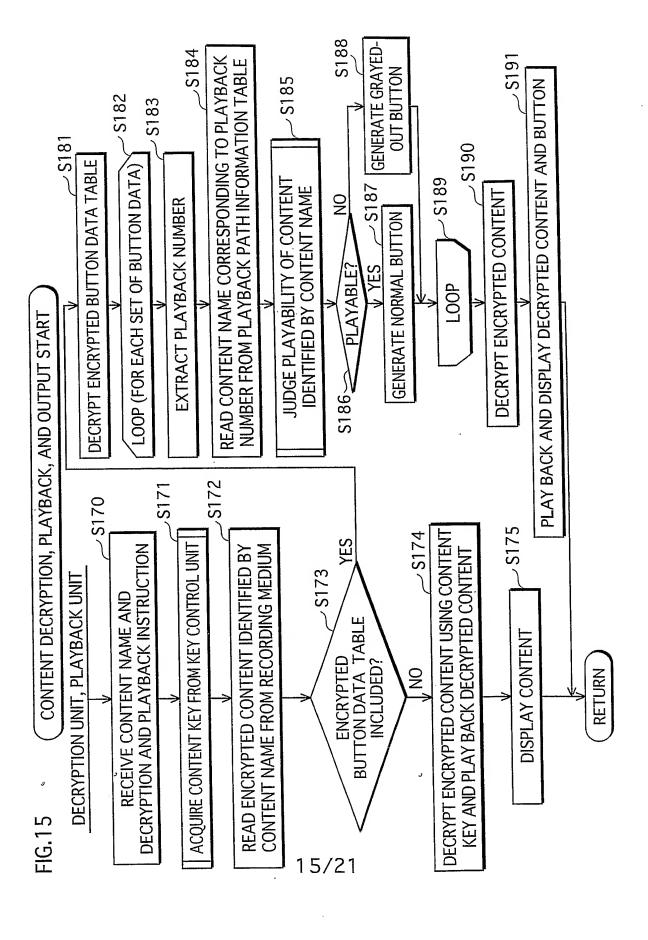

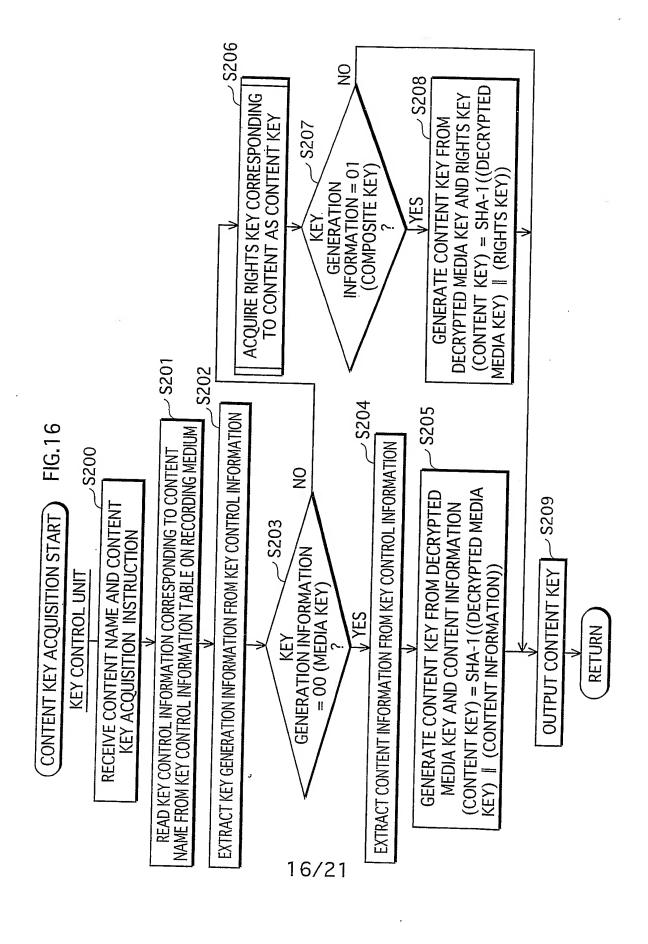

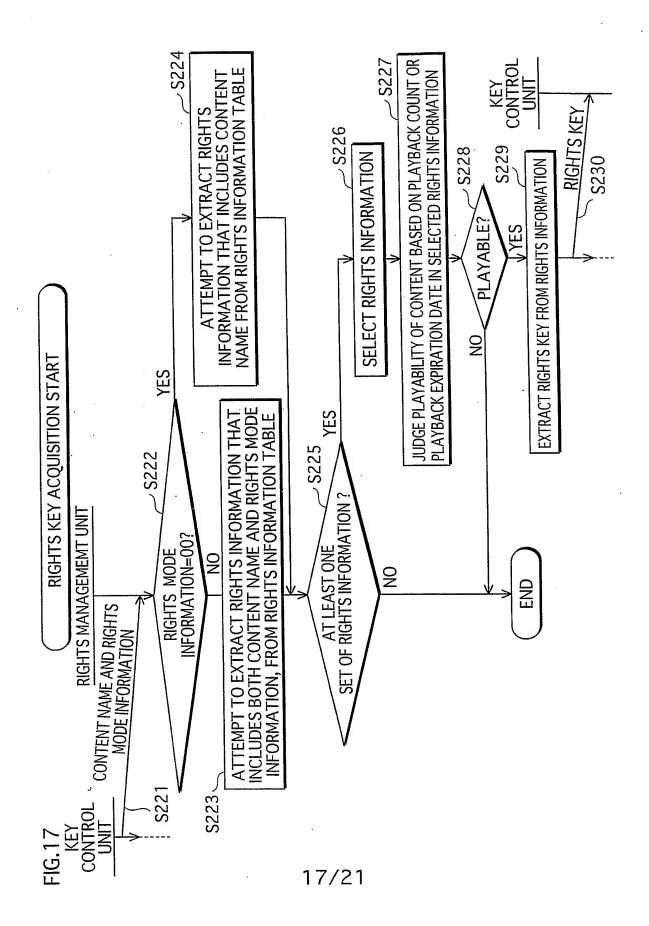

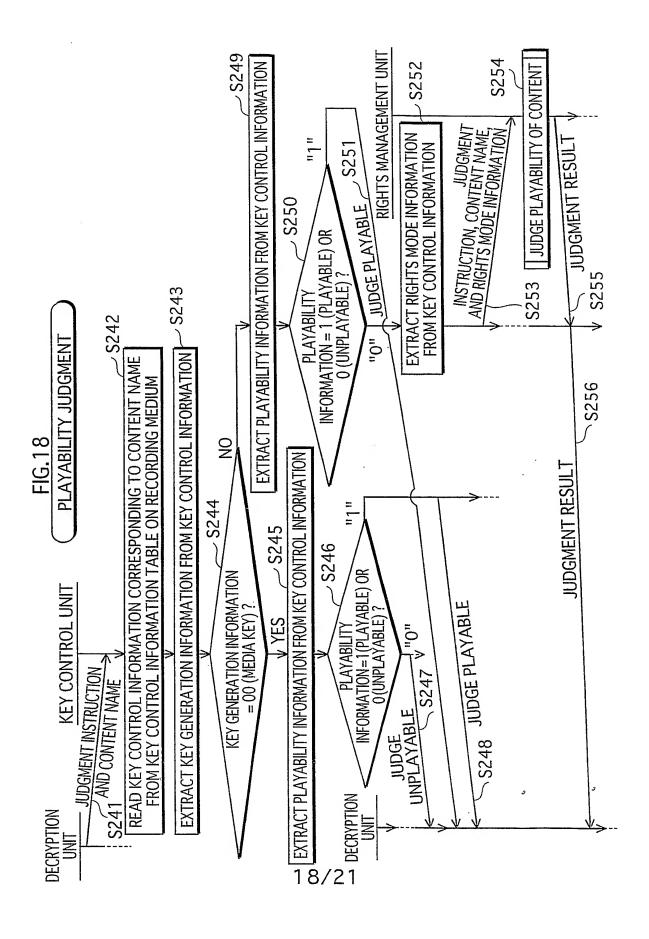

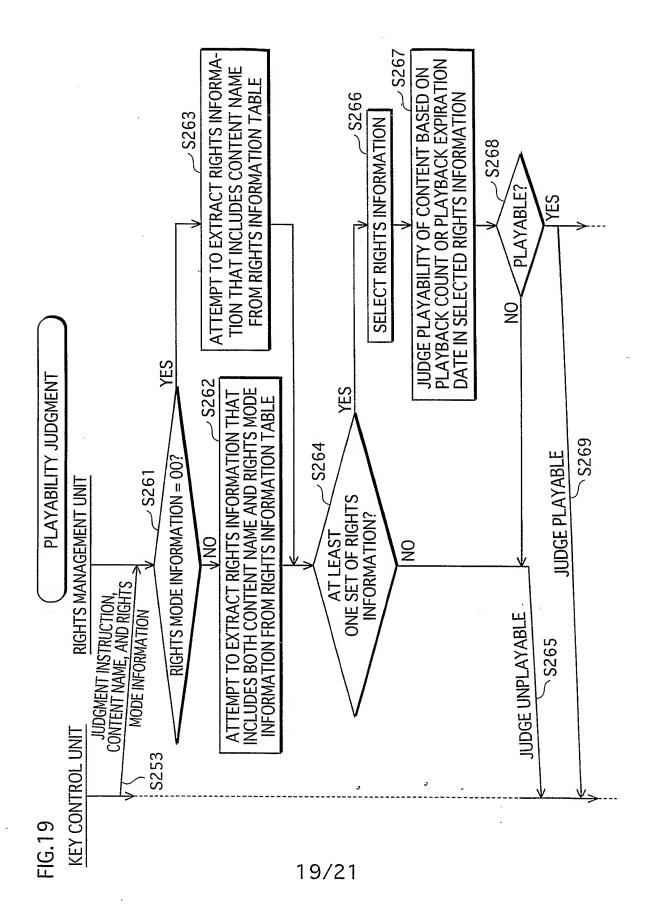


FIG. 20

